

39014

Air & Water Sequence Valve Information

- Air pressure should be about 60-65 psi
- Water pressure should be about 30-35 psi
- The A&W connects to the vacuum breaker on the side where the word "OUT" is raised in the black water body of the A&W
- After the A&W is installed, you may need to make an adjustment to the timing valve/bleed-off plug. Adjust so that flapper is open from 4-7 seconds. Turning clockwise increases the amount of time the flapper is open, counter-clockwise decreases it.

39014

Air & Water Sequence Valve Information

- Air pressure should be about 60-65 psi
- Water pressure should be about 30-35 psi
- The A&W connects to the vacuum breaker on the side where the word "OUT" is raised in the black water body of the A&W
- After the A&W is installed, you may need to make an adjustment to the timing valve/bleed-off plug. Adjust so that flapper is open from 4-7 seconds. Turning clockwise increases the amount of time the flapper is open, counter-clockwise decreases it.

39014

Air & Water Sequence Valve Information

- Air pressure should be about 60-65 psi
- Water pressure should be about 30-35 psi
- The A&W connects to the vacuum breaker on the side where the word "OUT" is raised in the black water body of the A&W
- After the A&W is installed, you may need to make an adjustment to the timing valve/bleed-off plug. Adjust so that flapper is open from 4-7 seconds. Turning clockwise increases the amount of time the flapper is open, counter-clockwise decreases it.